 
 



Order code Hollow shaft		05.2420	Type	1	X	X	X	XXXX	e
a Flange		c Output circuit / power supply							
1 = $\varnothing$ 24 mm [0.94"]		1 = push-pull (without inverted signal) / 5 ... 24 V DC							
b Blind hollow shaft		2 = push-pull (with inverted signal) / 5 ... 24 V DC							
(insertion depth max. 14 mm [0.55"])		3 = push-pull (without inverted signal) / 8 ... 30 V DC							
1 = $\varnothing$ 4 mm [0.16"]		4 = push-pull (with inverted signal) / 8 ... 30 V DC							
2 = $\varnothing$ 6 mm [0.24"]		d Type of connection							
4 = $\varnothing$ 1/4" ¹⁾		1 = axial cable, 2 m [6.56'] PVC							
		A = axial cable, special length PVC *)							
		2 = radial cable, 2 m [6.56'] PVC							
		B = radial cable, special length PVC *)							
		*) Available special lengths (connection types A, B):							
		3, 5, 8, 10, 15 m [9.84, 16.40, 26.25, 32.80, 49.21']							
		order code expansion .XXXX = length in dm							
		ex.: 05.2420.122A.1024.0030 (for cable length 3 m)							
		e Pulse rate							
		4, 6, 8, 10, 16, 20, 25, 36, 40, 50, 60,							
		80, 100 , 120, 125, 180, 200, 250, 300,							
		360 , 400, 500, 512 , 1000 , 1024							
		(e.g. 360 pulses => 0360)							
		Stock types							
		05.2420.1212.0500							
		05.2420.1222.0500							
		05.2420.1222.1000							
		05.2420.1222.1024							
		Optional on request							
		- other pulse rates							

SPECYFIKACJA TECHNICZNA


Liczba impulsów max	5000
Max. temperatura pracy	85 °C
Min. temperatura pracy	-20 °C
Montaż	Wał
Napięcie zasilania DC max.	30 V DC
Napięcie zasilania DC min.	5 V DC
Podłączenie	Kabel
Rozdzielczość	50 pulses/turn
Średnica obudowy	24 mm
Średnica wałka	4 mm
Stopień ochrony IP	IP50
Typ czujnika	Inkrementalny
Wersja	Wieloobrotowy
Wyjście	Push/Pull

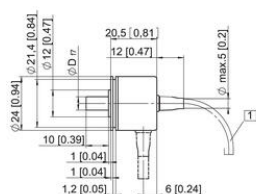

Brun
Vit
Grön
Gul
Grå
Rosa
Blå
Röd

+UB manöverspänning
0V manöverspänning
Kanal A
Kanal B
Kanal S
Kanal O

 Var noga med att ALLTID isolera
osvänds kablar innan givaren
spänningssluts.



Brun
Vit
Grön
Gul
Grå
Rosa
Blå
Röd

+UB manöverspänning
0V manöverspänning
Kanal A
Kanal B
Kanal S
Kanal O

Var noga med att ALLTID isolera
osvänds kablar innan givaren
spänningssluts.